

GPRS Stick Datalogger **Quick Installation Manual**

Version: 3.2



Delivery Content ■1 GPRS Stick

1 GPRS Antenna

1 Quick Installation Manual

Install the datalogger

The data collector is connected to the corresponding interface of the inverter. 5k inverter will used as an example in this manual.

Please follow the instruction as below:



Match the joint

2. Insert the datalogger to the inverter COM port

Only rotate the black circle, not the sliver cover.

1. Install the antenna to the datalogger

3. Rotate the black circle clockwise

Install the datalogger:

LED Li LED

LED indicators	Description	Status Status	Meanings	
Internet Indicators • (NET)	Shows the connection status between the datalogger and the server.	Flashing	Trying to connect with server	
		ON	Successfully connected	
		OFF	Abnormal connection	
Inverter COM Indicators •(COM)	Shows the connection status between datalogger and the inverter.	Flashing	Trying to connect with inverter	
		ON	Successfully connected	
		OFF	Abnormal connection	
Power Indicator •(PWR)	Shows the power supply status of the datalogger.	ON	Datalogger is powered up normally	
		OFF	Datalogger is powered up abnormally	

1. The device must be installed away from the strong magnetic field produced by large electrical appliances such as microwave oven, refrigerator, telephone, metal walls, etc. Otherwise, the communication quality may be affected. It may also be affected by lighting storm.

2. The [RESET] button on the back is used for connection. ·Short press will send the data immediately.

Long press for 5 seconds will reset the connection.

The three constantly ON LED lights indicate the datalogger is working normally.

_ight:	s Status:	Hello Welc		
) tors	Description	LED Status	Meanings	Usemar
Shows the connection status between the datalogger and the server.	Flashing	Trying to connect with server	Passwo	
	ON	Successfully connected	☑ Remer	
	OFF	Abnormal connection	Langua Settir	
COM Shows the connection status between datalogger and the inverter.	Flashing	Trying to connect with inverter		
	ON	Successfully connected	Step3: Select O	
		OFF	Abnormal connection	address registr
			Detelements	<

Create the Soliscloud Account

Step 1: Use you phone to scan the QR code to download and register the Solis Cloud APP. Or directly download from APP Store or Google Play Store by searching "SolisCloud".



Step 2: Open the APP and click register.



Owner or Organization for email tration.



Create Plant

Daily Current Power

0 000 kWh 0 0000 kW 5,000 kWp

<u>△</u> <u>₩</u> <u>₩</u> ⊙


O Dsouza Clinton


+ Add plant

Plant Location

E Scan

Step1: Enter the main page of Solis Cloud APP, click Step4: Enter the email to get the verification code. than enter your account and password, last click the "+"at the top right corner and select "Add plant".

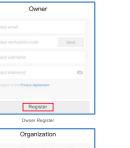

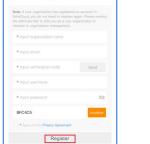


Organization Register


Step 2: Input the information of the plant as required. Then click "Done".



Step 3: Confirm the plant information. Click "Create plant".

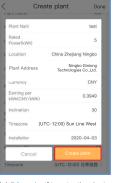

Step 4: Click "View plant" to enter the plant homepage, then add the datalogger.

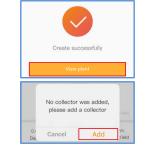

Step 5: Scan the datalogger SN QR code or manually input it.



Note: Scan the datalogger SN, NOT the inverter SN.

X

Step 6: Plant creation succeeds. Click

"View Plant".

"Continu...atalogger" to check the monitoring data. If

Binded successfully

Continu...atalogger View Plant

the plant has multiple dataloggers, please click

the following information as well:

- ◆ Problem Description

Ginlong Technologies Co., Ltd.

Tel: +86 (0)574 6578 1806

Contact

Please contact us if you have any technical

- ♦ Inverter SN
- ◆ Datalogger SN

No. 57 Jintong Road, Binhai Industrial Park, Xiangshan, Ningbo, Zhejiang, 315712, P.R.China.

Fax: +86 (0)574 6578 1606 Email: info@ginlong.com

Web: www.ginlong.com

problems in terms of the product. Please provide