

Install the datalogger

Connect the datalogger to the corresponding 4-pin COM port of the inverter. A Solis 5K inverter is used here as an example.

Please follow the instructions below:



WiFi Stick Datalogger **Quick Installation Manual**

Version: 3.1



Delivery Content ■1 WiFi stick

1 WiFi Antenna ■1 Quick Installation Manual

Match the joint

Install the datalogger:

1. Install the antenna to the datalogger 2. Insert the datalogger to the inverter COM port

Only rotate the black circle, not the sliver cover.

3. Rotate the black circle clockwise



1. The device must be installed away from the strong magnetic field produced by large electrical appliances such as microwave oven, refrigerator, telephone, metal walls, etc. Otherwise, the communication quality may be affected. It may also be affected by lighting storm.

- 2. The [RESET] button on the back is used for connection.
- ·Short press will send the data immediately. Long press for 5 seconds will reset the connection.
- The three constantly ON LED lights indicate the datalogger is working normally.

LED

ndicators	Description	Status	Meanings
Internet Indicators • (NET)	Shows the connection status between the datalogger and the server.	Flashing	Trying to connect with server
		ON	Successfully connected
		OFF	Abnormal connection
verter COM Indicators •(COM)	Shows the connection status between datalogger and the inverter.	Flashing	Trying to connect with inverter
		ON	Successfully connected
		OFF	Abnormal connection
Power Indicator •(PWR)	Shows the power supply status of the datalogger.	ON	Datalogger is powered up normally
		055	Dataloggeris

abnormally

Store by searching "SolisCloud".



first, then click the "WiFi configre".

LED Lights Status:

tion	LED Status	Meanings	Hello Welcome to ginlong	Hello Welcome to ginlong		
n ween gger rver.	Flashing	Trying to connect with server	Username/Phone Number/Em	Username/Phone Number/Email		
	ON	Successfully connected	Password			
	OFF	Abnormal connection	☐ Remember For	get passw		
n ween rand	Flashing	Trying to connect with inverter	Log in			
	ON	Successfully connected	.anguage setting WiFi configure	Data m		
	OFF	Abnormal	Please click "WiFi configu	ure"		

∠ WiFi Configuration Step 1: Use you phone to scan the QR code to

download and register the Solis Cloud APP. Or directly download from APP Store or Google Play



Step 2: If it is a new datalogger, please configure it



Step 3: Manually fill in the datalogger SN or Scan the SN on the datalogger.

> Fill in the datalogger SN Please fill in the datalogger sn


Step 4: Click "o", make sure the phone is connected

to router WiFi and switch back to the page to fill in the WiFi password, then move to next step.

Then click the "It's flashing".

Connect to route WLAN

Step 5: Long press the "Reset" button for 5 seconds until the yellow and green LEDs are quickly flashing.

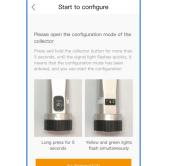

Create the Soliscloud Account

Step 6: Wait for around 10 seconds. After the Step1: Select Owner or Installer for email address registration. configuration completed, click "OK" and back to the main page. If failed, re-do the configuration process



Unconfigure(58)s



4 Create Plant

Step1: Enter the main page of Soliscloud APP, click the "Add plant" at the bottom.

.ı.| 🗢 🗈

All Normal Alarm Offline

Plant V | Daily the Current the Compact Compact Compact the Compact Compact the Compact Compac

Add plant



the "Register"




Step 2: Input the information of the plant as required. Then click "Done".



Step 3: Confirm the plant information. Click "Create a plant".



homepage, then add the datalogger.

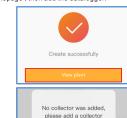

Cancel

Step 5: Scan the SN number of the datalogger or manually input it.



Note: Scan the datalogger SN, NOT the inverter SN.

"View Plant".

Step 6: Plant creation succeeds. Click

"Continu...atalogger" to check the monitoring data. If

Binded successfully

Continu...atalogger View Plant

the plant has multiple dataloggers, please click

Please contact us if you have any technical

problems in terms of the product. Please provide the following information as well:

- ◆Inverter SN
- ◆ Datalogger SN
- ◆ Problem Description

Ginlong Technologies Co., Ltd.

No. 57 Jintong Road, Binhai Industrial Park, Xiangshan, Ningbo, Zhejiang, 315712, P.R.China.

Tel: +86 (0)574 6578 1806 Fax: +86 (0)574 6578 1606

Email: info@ginlong.com Web: www.ginlong.com